



Extraordinary Digital Entertainment:  
TV the way it was meant to be.





## Welcome to CTV, powered by Camellia Communications

Thank you for choosing CTV for your home entertainment. This introductory booklet is designed to answer questions you may have about your new CTV digital service. We hope you will take some time to look through your handbook and keep it as a reference guide.

We look forward to having you as part of our Camellia Communications family for many years to come.





## Table of Contents

Customer Service & Support.....	1
Parental Controls.....	3
TV & Movie Ratings.....	4
HDTV.....	5
Set-Top-Box Set Up.....	6
Remote Control Set Up.....	8
Table of TV & DVD Brand Codes.....	14
STB Compatibility.....	20

## Customer Service & Support

NEED TO CONTACT US? WE'RE HERE TO HELP.

If you need help, have questions about your service or bill, or would like to find additional information about our services, we are ready to assist you.

- Visit our Web site at: [www.camelliacom.com](http://www.camelliacom.com) for help and other valuable information about our products and services.
- Or give us a call - we're here to assist you.

<b>Greenville</b>	<b>371-3000</b>
<b>Georgiana</b>	<b>756-7000</b>
<b>McKenzie</b>	<b>656-5000</b>
<b>Fort Deposit</b>	<b>404-4000</b>
<b>Technical Support (24 x 7)</b>	<b>371-6100</b>

### Camellia Communications

180 Greenville Bypass  
Greenville, Alabama 36037  
Monday through Friday  
8:00 AM to 4:30 PM.

**Mailing Address:**  
P.O. Box 129  
Greenville, Alabama 36037

### Maintenance

In order to provide high quality service, our technicians must periodically test our CTV network. This may cause temporary loss of service. If your service is not working properly, contact Customer Service. If we are testing or there is an outage in your area, you will be informed when you call. If the problem is not being caused by maintenance, we should know immediately if there is a problem in your area. In either case, we will work as quickly as possible to restore service.

### Sports Blackouts

Professional sporting events, both local and national, may be subject to blackouts per the league's broadcast rules. Due to these blackouts, not all programming and services will be available in all areas and programming may be subject to change.

### "Adult at Home" Policy

Camellia Communications' policy is that our installers and technicians WILL NOT enter your home to perform any work if a responsible adult is not present. We realize this may cause an inconvenience for some of our customers, but we feel this policy is essential to protect both you and our employees.

### Equipment

Camellia Communications will repair and/or replace the equipment we use to provide your CTV service at no charge provided the equipment is not abused and operated under normal conditions. If you are experiencing problems, contact Customer Service to schedule a service call. Camellia Communications does not repair personal equipment such as VCRs and televisions and is only responsible for bringing service to the input of such equipment. The equipment we provide to our subscribers is and shall remain the property of Camellia Communications and must be returned to Camellia Communications if service is discontinued for any reason, or if Camellia Communications wishes to exchange equipment. Failure to return equipment or damage of equipment may result in a charge being made against your account. Camellia Communications will replace or repair your equipment at no charge in the event of failure during normal use.

### Communications, Bills and Refunds

Camellia Communications will provide its customers with a 30-day notice of any changes in programming services and rate adjustments. Monthly fees are payable in advance of each month's service and are payable until the date we receive notification to discontinue service. Bills are payable upon receipt and become delinquent on the 15th of each month. If we do not receive full payment for service, a late fee may be applied and service will be subject to interruption. If service is interrupted for non-payment electronically, the balance plus a restoration fee will be collected before service is restored. If service has been physically disconnected, reconnection will require full payment of the amount owed plus a reconnection charge. Advance payment of a deposit and the next month's service fee may also be required. You may request that your deposit be returned after one year of good payment record. If you believe your statement contains a billing error, please contact us within 30 days of receipt of the statement in question. We will respond to all billing inquiries within seven business days.

## Parental Controls

CTV parental controls include V-Chip support, blocking of unrated programming, channel-by-channel blocking, and blocking by content rating levels. You have control over what information gets displayed on the Electronic Program Guide and can unlock controls for a particular time frame.



Initially your service uses default settings which allow access to all programs. Ratings are set from the Main Account. Subaccounts (individual user accounts) can be set up for household members based on their viewing needs. Once Parental Controls are activated an icon will appear in the navigation menu.

### Parental Control Settings from the Main Account

**Press the Menu key** on your remote control and arrow to the Settings tab. Press OK on your remote. Enter your Password, arrow to OK and press OK.

**Arrow to the Parental Control section and highlight Change, press OK.** This takes you to the Users tab. Here ratings for Movies, TV and Content are set up along with Unlock Timeout. Each rating has a drop-down menu for age appropriate programming. The Content ratings work in addition to the Movie and TV ratings and let you block unwanted content such as sex or violence.

*Tip: The Unlock Timeout lets you deactivate the Parental Controls for 30 minutes to 3 hours.*

After 3 hours Parental Control will automatically reactivate. To choose your Movie settings press OK and a drop-down menu will appear. Select the desired rating and press OK. Next you can do the same for TV Ratings and Unlock Timeout.

**Arrow to Content.** To select the ratings you want to block press OK and a checkmark will appear. To remove the content rating press OK

again. Ensure that the Enable Parental Control box is checked. If it is not checked, Parental Control is not enabled.

**Arrow to Done and press OK** takes you back to the Preferences tab. Arrow down to OK and press OK. You will be returned to your program.

*NOTE: Any Parental Controls set will only take effect if you check the Enable Parental Controls option on the Main Account and exit the Preferences tab via the OK button. Otherwise, the default setting is in effect, allowing the viewing of all programs regardless of settings for individual user accounts.*

### How to set up Subaccounts (Individual User Accounts)

**Press the Menu key on your remote control and arrow to the Settings tab.** Press the Select key on your remote. Input your Password, arrow to OK and press the Select key on your remote. If the electronic keyboard appears just press the Select key on your remote again.

**Arrow to the Users tab and press Select.** Arrow to Add, press Select. Arrow to New Login and press Select to display a digital keyboard. Use your remote's Arrow keys and the Select key to enter a Login Name. When done, arrow to Enter on the digital keyboard and press Select. The new Login Name will appear in the box.

**Arrow to and choose the desired Movie Rating for this User and press Select.** Now, arrow to and choose the desired TV Rating and press Select. Arrow to and enter New Password, Select. Arrow to Confirm Password and reenter what you typed in the New Password field, Select.

**Arrow to Allowance.** If you would like to set a spending limit for Pay Per View events and movies enter the amount and press Select. Arrow down to Submit and press Select. To restore TV viewing, press the Menu button on the remote twice.



## TV and Movie Ratings

### TV Ratings

#### TVY

**All Children** — Specifically designed for a very young audience.

#### TVY7

**Directed to Older Children** — Not intended for children under 7.

#### TVY7FV

**Directed to Older Children Fantasy Violence** — Fantasy violence may be more intense or more combative.

#### TVG

**General Audience** — Little or no violence, no strong language and little or no sexual dialogue or situations.

#### TVPG

**Parental Guidance Suggested** — Moderate violence (V), some sexual situations (S), coarse language (L), or suggestive dialogue (D).

#### TV14

**Parents Strongly Cautioned** — Not for children under 14. Intense violence (V), intense sexual situations (S), strong language (L), or suggestive dialogue (D).

#### TVMA

**Mature Audience Only** — Not intended for children under 17. Graphic violence (V), explicit sexual activity (S), or crude indecent language (L).

### Movie Ratings

#### G

**General Audiences** — Nothing that would offend parents for viewing by children.

#### PG

**Parental Guidance Suggested** — Parents urged to give “parental guidance.” May contain some material parents might not like for their young children.

#### PG-13

**Parents Strongly Cautioned** — Parents are urged to be cautious. Some material may be inappropriate for pre-teenagers.

#### R

**Restricted** — Contains some adult material. Parents are urged to learn more about the film before taking their young children with them.



## HDTV

HDTV is the ultimate home viewing experience! If your TV set is HDTV ready and you are a CTV subscriber, there's no additional monthly charge for HDTV. Plus, there's no other equipment to buy to receive the amazingly clear and crisp images.

With HDTV you can enjoy your favorite TV shows, movies, sports and events as if you were watching them in a theater. See more of the TV picture with a wider viewing area and feel the depth of surround sound technology.

CTV Customers get HD programming without paying extra for the service. There is a rental fee for the HD Set-Top-Box equipment. Please refer to your channel line-up brochure for the HD channels and programming.





## Set-Top-Box (STB) Set Up

The following pages describe the functions of the Set-Top-Boxes and remote controls used for your new CTV service. You may either have the AmiNet125 or AmiNet530 unit.

### AmiNet125 and AmiNet530 Set-Top-Box (STB)

#### Introduction

The AmiNet125 and AmiNet530 Set-Top-Boxes (STB) enable you to receive live TV and movies over your CTV service. You control all the functions of the Set-Top-Boxes by using the Amino infra-red remote control in conjunction with on-screen menus provided by Camellia Communications' CTV.

#### Controlling TV

The Set-Top-Boxes will typically allow you to choose what you want to view by keying in the channel number, stepping through the channels, or by selecting programs from an on-screen interactive program guide.

#### To Insert a Viewing Card

Do not insert or remove a viewing card until prompted by the on-screen display, or you may damage the card.

Insert the card fully into the slot on the front panel on the Set-Top-Box with the gold colored pads facing down and away from you.

#### Getting Started

The Set-Top-Boxes and their accessories are packed in a recyclable board and plastic package. Please keep all packaging in case you need to transport the unit at a later date. The Set-Top-Boxes and are supplied with the following accessories:

- Power supply
- Video lead
- 3 x AAA batteries for remote control
- Amino remote control

Please contact Camellia Communications if any of these accessories are missing.

#### Connecting RF (VCR)

- Unplug the cable coming from the antenna from the back of your VCR or TV and plug it into the RF antenna IN input of the Set-Top-Box.
- Connect the RF antenna OUT connector on the back of the Set-Top-Box to the RF IN connector on the VCR or on the TV if you do not have a VCR, using a standard RF cable available from retail outlets.

#### Connecting Video

The Set-Top-Boxes provide the following video outputs:

- Component Video (Y, Pr, Pb), which gives the best picture quality.
- RGB SCART is used primarily in Europe and provides equivalent quality to Component Video (add this word).
- S-Video, which gives good picture quality.
- Composite Video (CVBS), which gives standard picture quality.
- RF, which gives the same quality as broadcast TV.

Use the highest quality connection available on your other equipment.

- Camellia Communications / CTV will supply a SCART, Component Video or combined S-Video/Composite cable with your Set-Top-Boxes. If your TV has different inputs from the lead supplied, please contact Camellia Communications for an alternative.
- If your TV only provides an RF input the Set-Top-Box will deliver a good picture on the appropriate TV channel, as selected on the set top box Setup screen. The RF connection also supplies the audio, so a separate audio connection is not required.

#### Connecting Audio

The Set-Top-Box provides the following audio connections:

- Left and right audio for stereo sound (on the AV output).
- S/P DIF digital output for high quality surround sound when used with an external decoder and amplifier (not supplied).

If you are using the Component Video, S-Video, or Composite Video outputs you should connect the audio left and right connectors included in the lead to the TV or AV amplifier to provide sound.

If you have a separate AV surround sound amplifier with electrical S/P DIF input:

- Connect the digital audio output from the Set-Top-Box to a suitable digital audio input on the AV amplifier using a standard S/P DIF lead (not supplied) to allow you to listen to Dolby 5.1 surround sound or Windows Media Audio Pro when available.

### Connecting to the Digital TV Network

The Set-Top-Box can receive TV and movies from the digital TV network. Camellia Communications will have already installed a connection to this network.

- Connect the digital TV network lead provided by Camellia Communications to the digital TV input on the Set-Top-Box.

### Connecting Power

The Set-Top-Box is provided with a low voltage power supply.

- Connect the power lead from the power supply to the power input of the Set-Top-Box.
- Connect the main power to your TV, video recorder, Set-Top-Box power supply (using the supplied lead), and AV amplifier.



## Remote Control Set Up

While your remote control is pre-programmed to operate your CTV equipment, you must also set up your remote to work with your particular TV. Please refer to TV Brand Codes table for a list of TV Brand Codes and instructions on how to set up your remote control to work with your particular TV set.

This section explains how to set up and use the Amino remote control. Camellia Communications may have supplied you with either the AmiNet 125 or AmiNet 530 remote control.

### AmiNet 125 Remote Control

#### Inserting Batteries

The remote control requires three batteries type AAA, MN2400, UM-4, or LR03. For best performance we recommend using Alkaline batteries.

- Open the battery cover by pushing lightly on the recess and sliding the cover downwards.
- Insert the batteries, taking care to observe the correct polarity.
- Replace the battery cover by sliding the cover upwards until it clicks into place.

#### Switching on or off

To turn the remote on or off:

- Press the power button on the Amino remote control.

The red light on the front of the remote control illuminates to indicate power on.

#### Mode

In common with most universal remotes, the Amino remote is moded and operates in one of two modes, either *STB mode* or *TV mode*.

The mode is selected by pressing the TV or STB mode-select button at the top of the remote. When pressed, the TV or STB mode-select button illuminates for 1 second to indicate that the corresponding

mode has been set. The TV and STB buttons do not transmit any IR commands to either the TV or the STB.

When any function button on the remote is pressed, the TV or STB button will light to indicate that a command is being transmitted in that mode.

The mode remains selected until changed by the user.

If a button has no valid function in that mode neither the TV nor STB mode buttons will light.




## Using the remote to control the AmiNET 125

In Set-Top-Box (STB) mode, the remote can control the following functions of the AmiNET125:

### Note!

This only applies to the remote control illustrated below. If your service provider has given you a different remote, then please refer to the service provider's own User Guide.

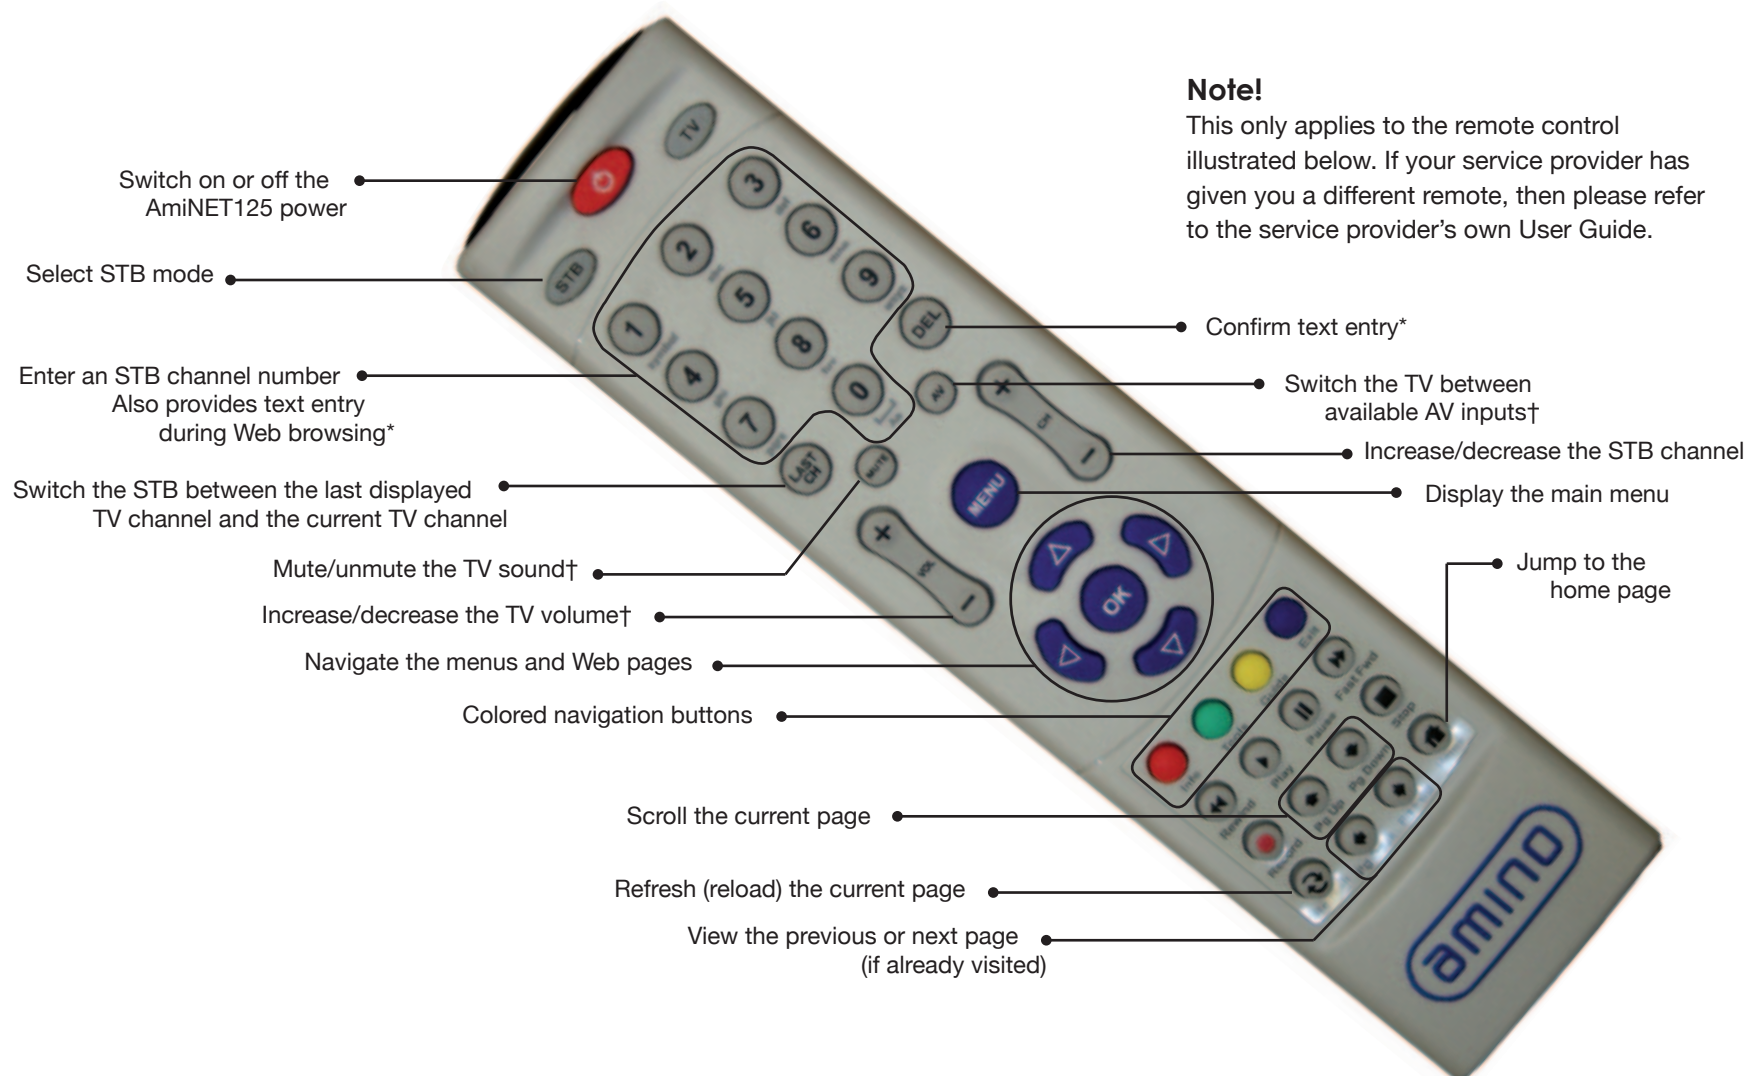

\* Text entry may not be supported by your Set-Top-Box.

† These buttons control the TV functions in both TV mode and STB mode.


### Configuring the Remote Control for your TV

In order for the remote to transmit the correct signals to control the TV, the remote must first be programmed with the 3-digit code corresponding to the make and model of TV in use. This is done in the following way:

- Identify the make of the TV that is to be controlled. For example, Sony, Magnavox, Philips, etc. and find it in the Table of TV Brand Codes below.
- Simultaneously press and hold the TV and OK buttons on the remote – after approximately 2 seconds, the TV button will light.
- Release the TV and OK buttons – the TV button remains illuminated.
- Now enter the 3-digit brand code according to the make of the TV that is being controlled.
- As each of the digits is entered, the TV button will briefly flash off and on again.
- When the third digit has been entered, the TV button will go out.
- If a TV brand code has been entered that the remote does not recognize, the TV button will flash rapidly for a second and remain illuminated. If this happens, re-enter the correct TV brand code.
- Verify that the remote control works with the TV.
- If no brand code is entered, or the brand code entered is incomplete, after several seconds, the remote will exit the TV brand code entry mode and the TV brand code will be unchanged.
- The remotes are supplied by default with TV Brand Code 000.

Most TV makes have more than one brand code listed in the brand code table – if this is the case try all brand codes that are listed for that make until a suitable match is found.

If no brand code is listed for the TV, try brand codes for common televisions such as Philips and NEC.

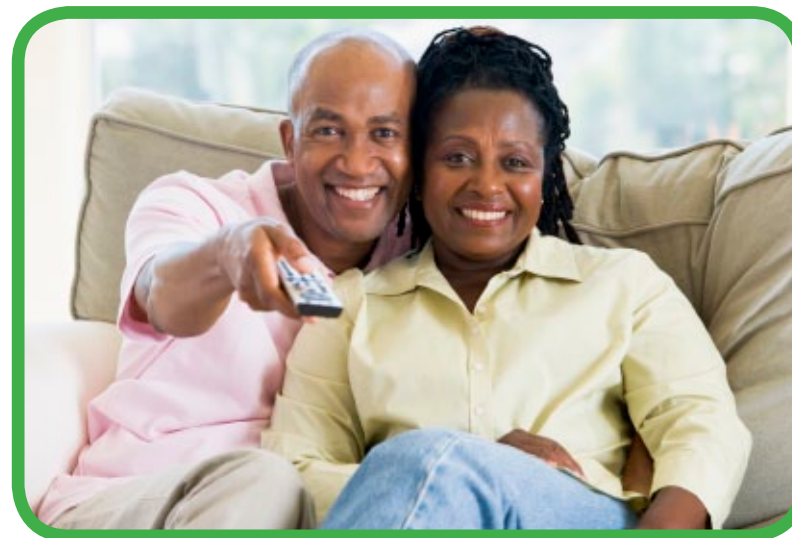



## AmiNet 530 Remote Control

### Inserting batteries

The remote control requires two batteries type AAA, MN2400, UM-4, or LR03. For best performance we recommend using Alkaline batteries.

- Open the battery cover by pushing lightly on the tab and lifting up the cover:
- Insert the batteries, taking care to observe the correct polarity:
- Replace the battery cover by engaging the two tabs in the top of the case and then closing it until it clicks into place.

### Switching on or off

To turn the remote on or off:

- Press the power button on the Amino remote control.

The red light on the front of the remote control illuminates to indicate power on.


### Using the Remote Control to Control your Set-Top-Box

To control the Set-Top-Box (STB) press the STB button on the remote control. The STB mode-select button will light for one second to indicate that the mode has been set. When any valid function button on the remote is pressed, the STB button will light to indicate that a command is being transmitted in STB mode.



## Using the remote to control the AmiNET 530

In Set-Top-Box (STB) mode, the remote can control the following functions of the AmiNET530:

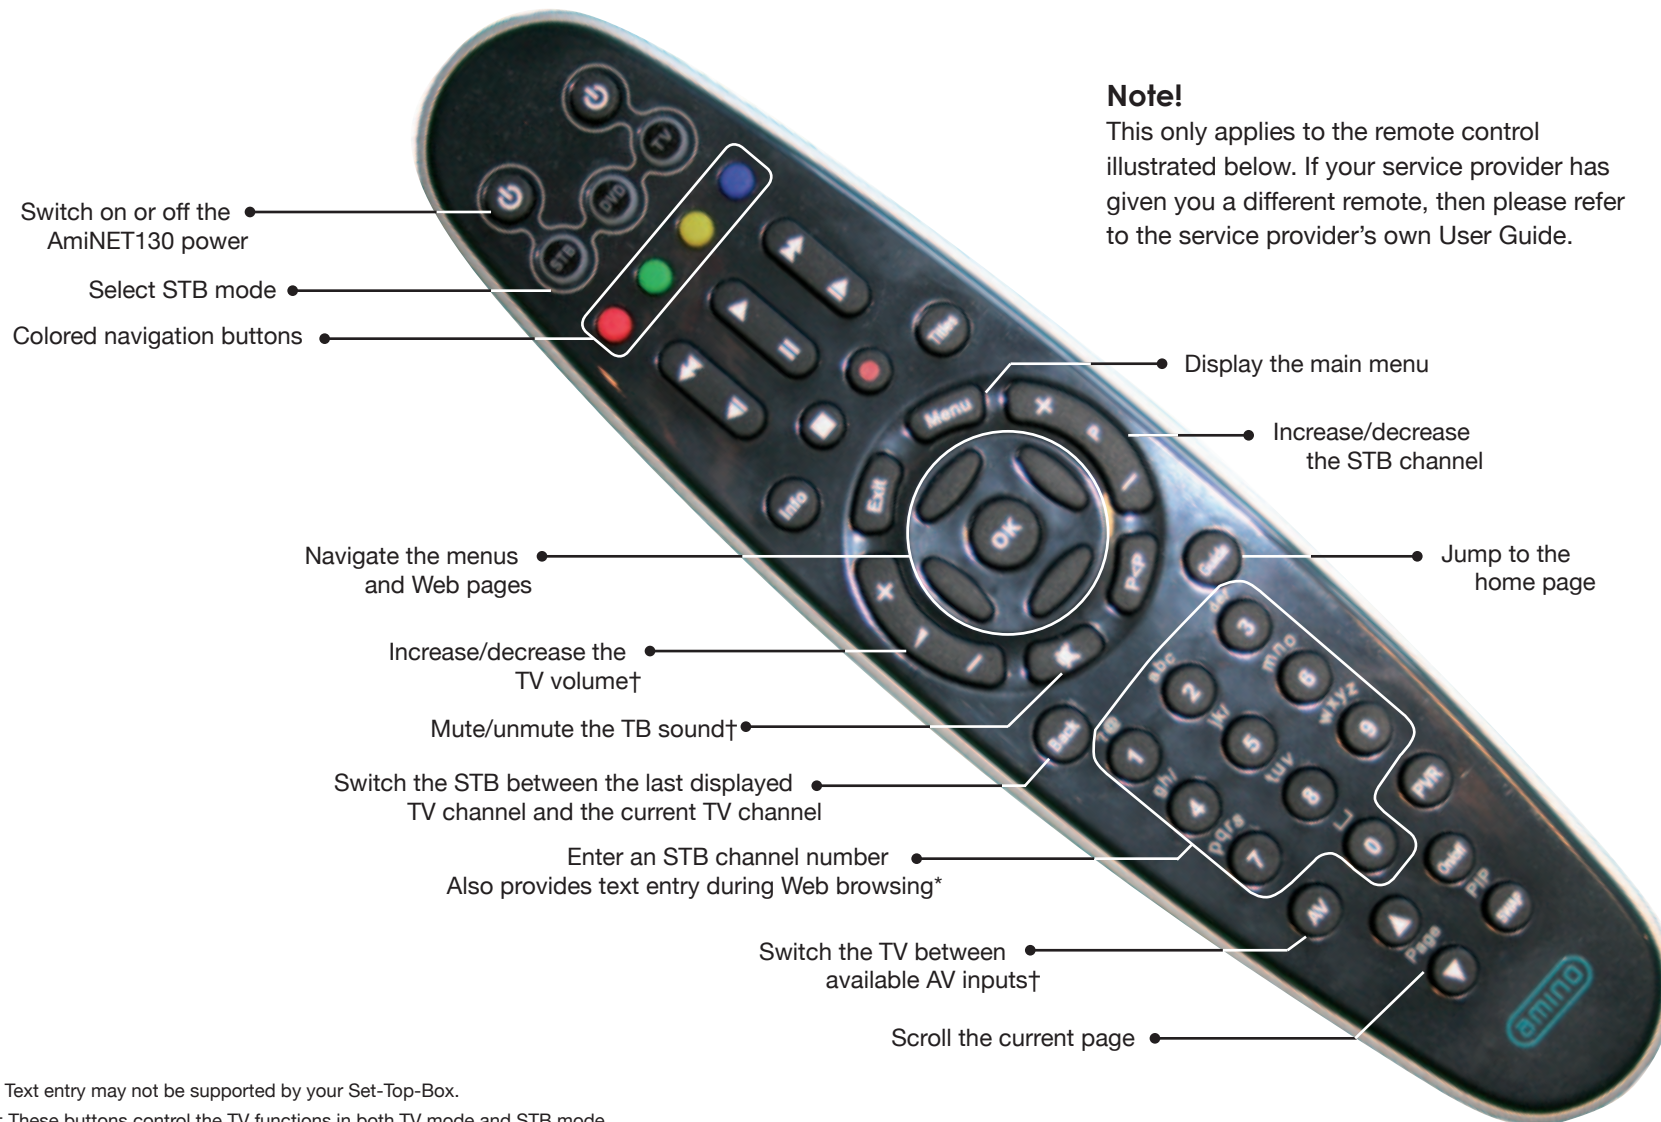

### Note!

This only applies to the remote control illustrated below. If your service provider has given you a different remote, then please refer to the service provider's own User Guide.

\* Text entry may not be supported by your Set-Top-Box.

† These buttons control the TV functions in both TV mode and STB mode.

### Configuring the Remote Control for your TV

In order for the remote to transmit the correct signals to control the TV/ DVD, the remote must be programmed with a code corresponding to the type of TV in use. Below is a set of instructions for programming TV codes into the remote. To program DVD codes into the remote repeat the steps below using the DVD mode button instead of the TV mode button:

- Identify the make of the TV; e.g. Sony, Philips etc.
- Find the TV make in the TV Brand Code Tables in this manual. Most makes of TV have more than one brand code listed. If this is the case, use the steps below to try all the codes until a suitable one is found. If no brand code exists for your make of TV contact your service provider for help.
- Press the TV Mode button and hold for 2.5 seconds. The TV button will blink twice.
- Continue to hold down the TV mode button for another 2.5 seconds. The TV button will blink twice again.
- Release TV mode button.
- Enter the 3-digit TV brand code from the list in this manual.

At each key press the mode button will blink.

If the TV brand code is accepted, the TV button will flash twice and go out when the 3rd digit is entered.

If the TV brand code is not accepted, the TV button will remain illuminated for 2.5 seconds and then go out. The remote will not have been programmed and the process will have to be repeated from the start.

During the programming steps if no button is pressed after 10 seconds, the TV button light will go out, the remote will not have been programmed, and the process will have to be repeated from the start. If during programming the TV button is pressed, the TV button will light for 2.5 seconds and go out. The remote will not have been programmed and the process will have to be repeated from the start.

### Controlling a TV

To control the TV press the TV button on the remote control. The TV mode-select button will light for one second to indicate that the mode has been set.

When any valid function button on the remote is pressed, the TV button will light to indicate that a command is being transmitted in TV mode.

### Controlling the DVD

To control the DVD press the DVD button on the remote control. The DVD mode select button will light for one second to indicate that the mode has been set.

When any valid function button on the remote is pressed, the TV button will light to indicate that a command is being transmitted in DVD mode.

## Table of TV & DVD Brand Codes

Please note: Certain codes are only available in newer remote controls (including 002-457-01-01, 002-463-01-01 and any part number starting with a 5). If it is not available in your remote then after entering it the TV button will flash rapidly for a second and remain illuminated. Please contact your STB provider to see if a newer version of your remote is available.

### TV Brand Codes

A.R. Systems 506 550  
 Abex 098  
 Acer 041  
 Acme 373 388  
 Acura 379 500  
 ADA 378  
 ADC 372 374  
 Admiral 001 099 207 214 370 371  
 372 386 387 440 514 557  
 Advent 113 197  
 Adventura 100  
 Adyson 373 492 493 527 528  
 Agashi 492 493  
 Agazi 372  
 AGB 448 498  
 Aiko 015 206 373 374 379 492 493  
 500 504 506 512 527 528  
 Aim 506  
 Aiwa 034 340 662  
 Akai 002 201 222 333 374 376 378  
 379 380 408 416 457 463 475 492  
 493 498 500 504 506 512 528 529  
 561 567 573  
 Akiba 380 506 529 540 558  
 Akito 390  
 Akura 372 380 417 500 506 529 540  
 Alaron 492  
 Alba 373 379 380 392 393 412 416  
 424 475 492 497 500 505 506 527  
 529 536 552 557 576 695  
 Alcyon 513  
 Alkos 472  
 Alleron 044  
 Allorgan 391 493 528 542  
 Allstar 408 506  
 America Action 211  
 Amplivision 373 493 497 528 543 555  
 Amstrad 372 379 380 395 416 417  
 440 448 498 500 506 521 529 551  
 Amtron 036  
 Anam 211 379 414  
 Anam National 003 036  
 Anglo 379 500  
 Anitech 372 379 403 500 506 513  
 Ansonic 379 382 496 497 500 503

506 515 536 538 541 556  
 AOC 004 005 155 201  
 Apex 074 088 111 119 229  
 Apex Digital 208 216 334  
 Apollo 560  
 Arc en Ciel 404 451 461 545  
 Arcam 492 493 527 528  
 Arcam Delta 373  
 Aristona 408 475 503 506 567  
 Arthur Martin 555  
 ASA 370 383 384 385 387 511 516  
 548  
 Asberg 403 408 506 513  
 Astra 379  
 Asuka 372 373 380 492 493 527 528  
 529 540  
 Atlantic 373 408 475 492 506 527  
 538 543  
 Atori 379 500  
 Auchan 555  
 Audiosonic 373 379 380 408 461 475  
 493 497 506 528 529 547  
 AudioTon 373 493 497 528  
 Audiovox 036 206 211 213 344  
 Ausind 403 513  
 Autovox 370 372 373 403 435 450  
 493 513 528 536 549  
 Aventura 209  
 Awa 492 493 502  
 Ayomi 533  
 Baird 441 461 493 512 523 524 528  
 Bang & Olufsen 370  
 Basic Line 379 380 408 493 500 506  
 529 540  
 Bastide 373 493 528  
 Baur 419 445 456 463 475 501 506  
 525 549 565  
 Bazin 493 528  
 Beko 377 398 424 497 506 636 639  
 648 682 691  
 Belcor 155  
 Bell & Howell 001 045 163 221  
 Benq 042 136  
 Beon 408 475 506 557

Best 497 547  
 Bestar 408 443 497 506  
 Binatone 373 493 528  
 Black Star 453 536  
 Blacktron 540  
 Blackway 540  
 Blaupunkt 378 458 525  
 Blue Sky 380 506 529 540 558 576  
 Blue Star 446 540  
 Bondstec 453 536  
 Boots 373 390 493 528  
 BPL 446 506 540  
 Bradford 036 211  
 Brandt 400 404 405 451 452 461 545  
 546 582 583  
 Brinkmann 506 557  
 Brionvega 370 408 475 506  
 Britannia 373 492 493 527 528  
 Brockwood 155  
 Broksonic 114 121 211 214 333 363  
 Bruns 370 377  
 BSR 391 455 542  
 BTC 380 529  
 Bush 379 380 386 389 390 392 393  
 408 412 416 443 446 455 456 461  
 474 475 476 493 500 505 506 528  
 529 540 542 549 552 566 576 609  
 668 688  
 Candle 004 007 100 155 201  
 Capsonic 372  
 Carena 506 558  
 Carnivale 201  
 Carrefour 392 505 511  
 Carver 205  
 Cascade 379 500 506  
 Cathay 408 475 506  
 CCE 493  
 Celebrity 002 199  
 Celera 216  
 Centurion 156 408 475 506  
 Century 370 536  
 CGE 403 453 455 497 513 536 557  
 Changhong 216  
 Cimline 379 393 500 529

Citizen 004 007 015 036 073 097 155  
 163 201 206 362  
 City 379 500  
 Clarion 211  
 Clarivox 475  
 Clatronic 372 373 379 380 395 403  
 408 424 453 493 497 500 506 513  
 515 528 529 536 543  
 CMS 492 493  
 Colortyme 004 155  
 Colt 358  
 Commercial Solutions 202  
 Concerto 004 155  
 Concorde 379 500  
 Condor 373 408 424 492 497 500  
 506 515 527 536 540 543 556  
 Contec 211 373 379 392 394 395  
 492 500 502 505 519 527  
 Contec/Cony 002 011 012 036  
 Continental Edison 400 404 405 441  
 451 461 545  
 Cosmel 379 500 547  
 Craig 036 211  
 Crosley 205 370 403 453 455 513  
 536  
 Crown 036 053 211 379 403 408 424  
 475 497 500 506 513 557 568  
 CS Electronics 373 380 453 492 527  
 529 536  
 CTC 382 453 536  
 Curtis Mathes 000 004 005 014 045  
 073 097 154 155 163 201 202 205  
 207 213 220 221 222  
 CXC 036 211  
 Cybertron 380 529  
 Daewoo 002 004 005 013 015 016  
 097 106 135 155 193 206 213 259  
 362 373 379 408 410 432 443 487  
 492 493 500 506 527 528 529 564  
 592 610 640 708  
 Dainichi 380 492 527 529  
 Dansai 372 408 475 492 493 504 506  
 527  
 Dantax 398 427 475 476 497

Dawa 506  
 Daytron 004 097 155 379 500  
 De Graaf 376 386 397 508 532  
 Decca 373 374 390 395 408 448 475  
 493 498 506 512 528  
 Dell 141 142 146  
 Denon 220  
 Desmet 408 475 506 543  
 Diamant 506  
 Diamond 492  
 Dimensia 000 154  
 Dixi 379 408 475 493 500 506  
 DTS 379 500  
 Dual 373 428 450 451 455 461 470  
 493 506 528 538 549 550 566  
 Dual-Tec 373 379 455 528 538  
 Dumont 155 200 370 373 382 384  
 385 493 511 515 528  
 Durabrand 198 209 210 211 214  
 Dux 475  
 Dwin 207  
 Dynatron 408 475 506  
  
 Elbe 440 493 496 497 498 506 529  
 533 538 541 556 572  
 Elcit 370 498 515 536  
 Electa 446  
 ELECTRO TECH 379  
 Electroband 002 199  
 Electrograph 218  
 Electrohome 002 003 004 018 021  
 155  
 Elektra 540  
 Elin 373 383 385 408 475 492 500  
 506 516 527 549  
 Elite 380 408 506 529  
 Elman 382 455 515  
 Elta 379 492 500  
 Emerson 004 005 011 013 025 031  
 033 036 044 045 080 097 102 107  
 155 163 191 209 210 211 214 221  
 337 362 363 370 452 463 497 506  
 511 521 536  
 Emperor 540  
 Envision 004 155 201  
 Epson 217  
 Erres 408 475 503 506  
 ESA 209  
 ESC 493  
 Etron 379  
 Euro-Feel 372 493  
 Euroline 427 466 475  
 Euroman 492 493 497 540  
 Euromann 372 373 408 506 527 528  
 Europhon 373 382 390 408 448 455  
 492 493 498 506 515 528 536  
 Expert 538 555  
 Exquisit 506

Fenner 379 443 500  
 Ferguson 399 400 407 409 422 441  
 452 471 475 523 524 533 546 606  
 Fidelity 373 386 416 492 506 527  
 Filsai 493  
 Finlandia 376 386 548  
 Finlux 370 373 374 382 383 384 385  
 403 408 448 455 474 475 493 498  
 506 511 512 513 515 516 522 528  
 548 556  
 FIRST LINE 373 379 391 408 412 453  
 Firstline 492 493 500 506 512 515  
 527 528 533 536 542 544 549 556  
 576  
 Fisher 043 045 047 103 157 163 221  
 370 373 376 385 392 394 401 424  
 455 493 497 505 509 512 519 528  
 549  
 Flint 408 506 512 529 558  
 FNR 515  
 Formenti 370 371 373 403 450 455  
 457 475 492 513 527 543  
 Fortress 370 371 514  
 Fraba 497 506  
 Friac 497  
 Frontech 372 379 386 387 416 445  
 453 493 500 536 549  
 Fujitsu 029 044 308 309 310 311 374  
 493 512 515 528  
 Funai 036 044 046 209 211 317 357  
 372 391 522 542  
 Futuretech 036 211  
  
 Galaxi 506 515  
 Galaxis 497 506 515 557  
 Galaxy 424  
 Gateway 038 218 223  
 GBC 379 392 455 500 529  
 GE 000 002 003 004 008 021 048  
 049 063 068 070 143 144 154 155  
 202 203 210 213 281 359 360  
 Geant Casino 555  
 GEC 373 374 387 402 408 448 456  
 463 475 493 498 506 507 512 528  
 549  
 Gelooso 379 386 455 500 536  
 General 559  
 General Technic 379 500  
 Genexxa 380 387 408 506 529  
 Giant 493  
 Gibraltar 155 200 201  
 GoldHand 492  
 Goldline 506  
 Goldstar 004 005 011 018 050 090  
 091 097 098 155 201 210 361 373  
 379 381 386 408 425 431 453 455  
 475 476 492 493 494 497 500 506

527 528 536 554  
 Goodmans 372 374 379 392 393 408  
 416 431 441 443 452 475 493 494  
 498 500 504 505 506 512 522 528  
 561 564 567  
 Gorenje 424 497  
 GPM 380 529  
 Graetz 387 463 464  
 Granada 373 374 376 386 392 396  
 401 403 408 413 448 452 457 460  
 475 493 498 503 505 506 509 512  
 513 517 528 531 546 553 555 560  
 Grandin 379 380 446 475 540  
 Gronic 493  
 Grundig 378 384 403 430 435 442  
 444 458 459 497 506 511 513 525  
 567 585 646  
 Grunpy 036 044 211  
  
 Haier 198  
 Halifax 372 373 492 493 527 528  
 Hallmark 004 155 210  
 Hampton 373 492 493 527 528  
 Hanseatic 373 377 379 391 392 408  
 445 455 463 475 493 496 497 500  
 506 528 540 541 542 543 549 566  
 Hantarex 379 448 498 500 506  
 Hantor 506  
 Harley Davidson 357  
 Harman/Kardon 205  
 Harvard 036 211  
 Harwood 500 506  
 Havermy 207  
 HCM 372 373 379 446 493 500 506  
 528 529 540 557  
 Hello Kitty 213  
 Hema 493 500 528  
 Hemmermann 549  
 Hifivox 461  
 Higashi 492  
 HiLine 506  
 Hinari 376 379 380 392 403 408 475  
 500 505 506 522 529 552  
 Hisawa 380 446 529 540 555 558  
 Hisense 112 215  
 Hitachi 002 004 011 012 030 051 084  
 085 086 102 132 133 134 155 220  
 225 231 316 320 323 326 328 329  
 331 357 373 374 383 386 387 388  
 392 397 402 404 405 406 426 445  
 448 455 457 460 461 462 463 464  
 465 493 498 505 506 507 508 512  
 516 518 528 530 532 549 553 560  
 562 564 610 633 635 656 658 659  
 694  
 Hornyphon 408  
 Hornyphone 506  
 Hoshai 380 529 558

Huanyu 373 443 492 527  
 Hygashi 373 492 493 527 528  
 Hyper 373 379 453 455 492 493 500  
 527 528 536  
 Hypson 372 373 408 446 475 493  
 506 528 540 555 558  
  
 Iberia 506  
 ICE 372 373 379 380 408 416 492  
 493 500 506 527 528 529  
 ICeS 492 527 529  
 IMA 036  
 Imperial 387 403 408 424 453 455  
 497 506 513 536 549 557  
 Indesit 389 435  
 Indiana 408 475 506  
 Infinity 053 205  
 Ingelen 387  
 Ingersol 379 500  
 Inno Hit 373 374 379 380 408 431  
 448 475 493 494 498 500 506 512  
 513 528 529 536  
 Innovation 372 379 415 416 441 443  
 476 478  
 Inteq 200  
 Interactive 497  
 Interbuy 379 453 500 536  
 Interfunk 370 387 408 453 461 463  
 475 497 503 506 539 565  
 International 492  
 Intervision 372 373 382 493 497 506  
 515 528 529 536 540 554 558 566  
 Irradio 379 380 408 416 475 494 500  
 506 513 529 536  
 Isukai 380 506 529 540  
 ITC 373 455 493 528  
 ITS 380 408 416 446 492 506 527  
 529 540  
 ITT 379 387 396 456 457 463 464  
 522 548 549 560 561  
 ITV 379 427 475 476 506 536  
  
 Janeil 100  
 JBL 053 205  
 JC Penney 000 002 004 005 007 012  
 021 048 049 058 063 068 072 073  
 075 097 098 154 155 194  
 JCB 002 199  
 JEC 472 504  
 Jensen 004 155 197  
 JVC 002 011 012 026 049 054 055  
 080 117 130 131 204 261 341 392  
 408 416 422 505 510 523 524 529  
 570 575 666 669 686 689  
  
 Kaisui 373 379 380 446 492 493 500  
 506 527 528 529 540 558  
 Kamosonic 373



Kawasho 002 004 155 492  
 KEC 211  
 Kendo 382 386 393 440 497 506 515  
 536 556 572  
 Kennedy 455  
 Kenwood 004 018 155 201 349  
 KIC 493  
 Kingsley 373 492 527  
 KLH 216  
 Kloss Novabeam 036 056 057 100  
 Kneissel 496 497 506 533 538 541  
 556  
 Kolster 408 506  
 Konkra 219 380 529  
 Korpel 408 475 506  
 Korting 370 497 543  
 Kosmos 506  
 Koyoda 379  
 KTV 036 097 161 201 211 373 493  
 Kyoto 492 493

Lasat 497  
 Lenco 379 500  
 Lenoir 373 379 500  
 Lesa 453 536  
 Leyco 372 374 391 408 475 506 512  
 542 568  
 LG 005 210 373 379 381 386 408  
 425 427 431 453 455 466 475 476  
 492 493 494 497 500 506 527 528  
 536 554 652 657 677 687 696 706  
 LG/GoldStar 677  
 Liesenk 475  
 Liesenkotter 506  
 Life 372 379 415 416 441 443 476  
 478  
 Lifetec 372 379 415 416 441 443 476  
 478 500 506 529 566 576  
 Lloyd's 357 500  
 Loewe 053 433 434 496 497 498 506  
 541 565 588 630 634  
 Loewe Opta 370 408 475  
 Logik 001 395 502  
 Luma 386 463 475 500 506 538 556  
 Lumatron 386 408 463 475 493 506  
 528 538  
 Lux May 408  
 Luxman 004 155  
 Luxor 373 386 406 431 435 456 460  
 463 493 494 549 553 561 563  
 LXI 000 004 045 053 058 068 075  
 154 162 163 202 205 208 210 221

M Electronic 373 379 383 385 387  
 400 408 416 443 461 475 561 563  
 Magnadyne 370 382 448 453 455  
 475 498 515 536  
 Magnafon 373 382 403 448 492 498

513 515 527  
 Magnasonic 362  
 Magnavox 004 007 018 053 056 057  
 059 060 110 147 155 164 169 195  
 201 205 232 233 312 357  
 Magnin 359  
 Magnum 372 379 415 416 441 443  
 476 478  
 Majestic 001  
 Mandor 372  
 Manesth 372 373 393 408 475 493  
 504 506 528 542 543  
 Marantz 004 051 053 155 165 201  
 205 313 408 475 506  
 Marelli 370  
 Mark 408 475 492 493 500 506 527  
 528  
 Masuda 493  
 Matsui 373 374 379 386 390 391 392  
 393 395 408 412 416 430 448 472  
 475 493 498 500 502 504 505 506  
 509 512 521 525 528 542 546 549  
 551 552 558 567 568  
 Matsushita 212 414  
 Maxent 218  
 McMichael 402 507  
 Mediator 408 475 503 506 567  
 Medion 372 379 415 416 443 476  
 478 506 576  
 Megatron 004 051 210 220  
 M-Electronic 492 493 500 506 516  
 527 528 536 548 556 565  
 Melvox 555  
 Memorex 001 004 005 022 045 046  
 163 210 214 221 351 361 379 500  
 Memphis 374 379 500 512 547  
 Mercury 500 506  
 Metz 370 418 458 467 468 525 534  
 539  
 MGA 002 004 005 018 021 047 061  
 155 166 201 210 359  
 Micromaxx 372 379 415 416 441 443  
 476 478  
 Microstar 372 379 415 416 441 443  
 476 478  
 Midland 049 068 097 098 200 202  
 203  
 Minerva 384 435 458 498 511 513  
 525  
 Minoka 408 506  
 Minutz 048  
 Mitsubishi 002 004 005 018 021 032  
 047 061 155 166 167 192 207 210  
 270 272 313 319 360 370 392 395  
 408 434 435 458 505 506 517 551  
 565 660 679  
 Mivar 373 403 431 448 492 493 494  
 495 496 497 498 499 513 527 541

571  
 Montgomery Ward 001  
 Motion 403 513  
 Motorola 003 099 207  
 MTC 004 005 073 155 201  
 MTC 456 492 497 549  
 Multi System 475  
 Multistandard 515  
 Multitech 036 211 373 379 382 386  
 392 403 404 453 455 475 492 493  
 497 500 506 515 527 528 536 549  
 Multivision 158  
 Murphy 373 385 457 492 512 527

NAD 004 058 075 085 160 162 208  
 210 463  
 Naonis 386 440  
 National 413 435 526  
 NEC 003 004 005 155 201 392 481  
 493 505 520 543  
 Neckermann 370 373 378 386 408  
 424 445 456 475 493 497 501 506  
 528 536 549 556 557 567  
 NEI 408 416 475 506 547  
 Nesco 453 522 536  
 NET-TV 040 218  
 Network 547  
 Neufunk 500 506 567  
 New Tech 379 408 500 506 528 567  
 New World 380 529  
 NewTech 493  
 Nicamagic 373 492 527  
 Nikkai 372 373 374 380 408 472 475  
 492 493 500 504 505 506 512 527  
 528 529 547  
 Nikko 004 015 201 206 210  
 Nobliko 373 382 384 403 492 511  
 513 515 527  
 Nogamatic 461  
 Nokia 387 396 456 457 463 464 548  
 549 560 561 563 573  
 Norcent 215 302  
 Nordic 493  
 Nordmende 370 387 389 400 404  
 405 408 441 451 452 461 525  
 Nordvision 475  
 Novatronic 506 516  
 NTC 015 206

Oceanic 387 463 464 542 555  
 Okano 424 497 506 512  
 ONCEAS 373  
 Onwa 036 211 529  
 Opera 506  
 Optimus 085 160 212 221 351  
 Optonica 064 099 207  
 Orbit 408 506  
 Orion 023 033 107 214 363 379 391

393 395 408 412 418 448 464 475  
 476 498 500 502 506 515 521 542  
 543 544 552 636  
 Online 506 529  
 Ormond 476  
 Orsowe 498  
 Osaki 372 373 374 380 473 493 506  
 512 528 529  
 Osio 494  
 Oso 380 529  
 Osume 374 394 505 512 519 529  
 Otto Versand 371 373 378 392 408  
 419 441 445 446 455 456 461 463  
 475 493 498 501 505 506 514 525  
 528 531 536 542 543 549 565 567

Pael 373 492 527  
 Palladium 373 381 424 493 497 501  
 506 528 536 549 556 557 567  
 Palsonic 493  
 Panama 372 373 379 473 492 493  
 500 506 527 528 536  
 Panasonic 003 010 046 049 053 096  
 123 140 152 203 212 226 235 242  
 246 247 248 250 258 265 271 273  
 274 291 292 322 336 339 346 348  
 350 351 364 365 366 367 369 387  
 413 414 415 435 449 463 464 467  
 468 482 489 498 506 526 531 537  
 574 580 587 594 598 600 602 619  
 625 632 644 680 701  
 Panavision 506 556  
 Pathe Cinema 373 455 492 496 497  
 527 533 541 543 549 555  
 Pathe Marconi 404 405 451 461 545  
 Pausa 379 500  
 Penney 201 202 203 208 210 359  
 361  
 Perdio 374 492 506 512 543  
 Perfekt 506  
 Philco 003 004 005 007 011 018 053  
 056 057 059 155 164 201 205 370  
 403 453 455 497 506 513 536 557  
 Philharmonic 373 473 493 528  
 Philips 003 007 011 017 018 053 056  
 057 059 063 095 126 129 148 155  
 168 169 170 205 228 232 233 263  
 264 275 276 277 280 338 347 370  
 373 402 403 408 427 428 441 443  
 455 463 469 475 490 491 503 506  
 507 567 579 581 584 586 590 593  
 595 596 597 604 608 611 612 613  
 616 617 620 627 641 647 649 654  
 663 674 683 685 690  
 Philips Magnavox 148 228 232 233  
 264  
 Phoenix 370 408 475 492 497 506  
 512 527 543

Pioneer 004 035 085 102 155 160  
 171 172 173 196 268 387 400 408  
 461 475 497 506 703  
 Plantron 372 408 500 506  
 Plasmsync 313  
 Playsonic 493 528  
 Polaroid 216 298  
 Poppy 379 500  
 Portland 004 005 015 097 155 206  
 Prandoni-Prince 386 448 463 498  
 513 536  
 Precision 373 473 493 528  
 Price Club 073  
 Prima 113 197 379 387 500  
 Prinz 406 512 549  
 Prism 049 203  
 Profex 379 403 463 500  
 Profilo 476  
 Profi-Tronic 408 506 515  
 Proline 374 408 412 503 506 512 544  
 Proscan 000 008 068 154 202  
 Prosonic 373 475 476 492 493 497  
 506 526 527 568  
 Protech 372 373 379 382 408 453  
 455 456 473 475 493  
 Proton 004 011 155 174 210  
 Provision 475 476 506 564  
 Pulsar 155 200  
 Pye 408 416 475 503 506 567 653  
 693  
 Pymi 379 500

Quandra Vision 555  
 Quasar 003 039 046 049 062 069 161  
 175 203 212 351 453  
 Quelle 372 373 383 384 385 391 395  
 408 419 453 455 458 463 475 476  
 493 494 501 502 505 506 511 516  
 519 525 528 536 549 565  
 Questa 392 505

Radialva 506 529  
 Radio Shack 000 045 163 221  
 Radio Shack/Realistic 004 011 036  
 045 064 097 098 154 155 163  
 Radiola 408 475 493 503 506 567  
 Radiomarelli 370 448 453 498 506  
 536  
 RADIONETTE 383 385  
 RadioShack 201 202 210 211 357  
 506  
 Radiotone 377 408 497 500 506 557  
 568  
 Rank 384 392 511  
 RBM 384  
 RCA 000 143 281 283  
 RCA 000 003 004 005 008 018 028  
 052 065 067 068 071 076 082 102

104 106 108 115 143 151 154 155  
 176 177 178 179 196 202 224 262  
 281 283 330 335 342 359 360 396  
 Realistic 000 045 163 201 210 211  
 221  
 Recor 506  
 Rediffusion 463  
 Redstar 506  
 Reflex 506  
 Revox 408 475 497 506  
 Rex 372 386 387 440 536 538 556  
 RFT 370 377 496 497 512 541  
 Rhapsody 492  
 R-Line 408 475 506  
 Roadstar 372 379 380 500 529 557  
 698  
 Robotron 370  
 Rowa 492 493  
 Royal Lux 497  
 RTF 370  
 Runco 200 201

Saba 370 387 400 404 405 410 441  
 448 451 452 461 463 464 498 546  
 582 583 684  
 Sagem 558 572  
 Saisho 372 373 379 393 395 448 493  
 498 500 502 521 528 551  
 Salora 386 387 396 406 431 440 445  
 455 456 460 463 494 498 549 553  
 Sambers 382 403 448 498 513 515  
 Sampo 004 097 098 120 155 201 218  
 Samsung 004 005 011 014 018 019  
 072 073 078 094 097 098 155 180  
 201 210 222 244 269 307 324 343  
 354 368 285 288 289 290 294 295  
 301 305 307 343 368 372 373 374  
 379 395 408 424 429 431 437 438  
 470 473 475 477 488 492 493 494  
 497 500 506 512 527 528 567 569  
 614 618 631 637 642 705  
 Sandra 373 492 493 527 528  
 Sansui 023 107 122 214 234 333 357  
 363 408 506  
 Sanyo 045 103 155 157 163 166 181  
 182 221 318 359 373 374 376 383  
 385 392 394 395 396 401 403 452  
 455 470 492 493 496 497 500 502  
 505 509 512 519 527 528 541 624  
 676 678 700  
 SBR 402 475 503 506 567  
 SCHAUB LORENTZ 387 463 464  
 Schaub Lorenz 549  
 Schneider 373 380 408 416 417 450  
 455 461 470 475 478 493 503 506  
 528 529 536 538 549 550 566 567  
 576 655 671 673 681  
 Scotch 004 210

Scott 004 011 033 036 044 155 210  
 211  
 Sears 000 002 004 012 018 044 045  
 047 055 058 068 075 103 105 154  
 155 157 162 163 183 184 202 205  
 208 209 210 221 357 361  
 SEG 372 373 382 392 403 427 453  
 455 475 492 493 500 505 506 517  
 527 528 536 576  
 SEI 498 501 506 515 542 549  
 SEI-Sinudyne 370 382 387 391 418  
 448 498 521  
 Seleco 386 387 392 440 455 538 556  
 Sencora 379 500  
 Sentra 472 500 504 529  
 Serino 492 558 572  
 Sharp 004 009 011 025 032 064 077  
 092 097 099 138 153 155 185 186  
 190 207 245 282 286 293 296 371  
 375 392 394 411 483 484 498 505  
 510 514 519 542 591 603 623 626  
 650 664 675 702  
 Sheng Chia 207  
 Shogun 155  
 Shorai 391 522 542  
 Siarem 370 382 448 455 498 506 515  
 519 525  
 Siemens 378 394 458  
 Sierra 408 503 506 567  
 Siesta 470 497  
 Signature 001 187  
 Silva 492 527  
 Silver 392 505 522  
 Simpson 007  
 Singer 370 382 453 455 515 536 555  
 Sinudyne 370 382 391 393 418 455  
 475 498 501 506 515 521 542 549  
 Skantier 387 460 553  
 Sogera 543  
 Solavox 387 512  
 Sonitron 376 396 493 497 528  
 Sonoko 372 373 379 408 475 493  
 500 506 528 540  
 Sonolor 376 387 501 555  
 Sontec 408 470 475 497 506 542  
 Sony 002 037 109 128 137 199 227  
 230 236 240 251 255 279 284 287  
 304 306 327 332 356 357 374 379  
 392 394 395 419 439 452 454 473  
 479 480 501 502 505 515 577 578  
 589 599 605 615 629 643 661 667  
 699  
 Sound & Vision 380 382 515 529  
 Soundesign 004 007 036 044 155  
 210 211  
 Soundwave 408 475 506 543 557  
 Squareview 105 209  
 SSS 036 155 211

Standard 373 379 380 408 473 493  
 500 506 528 529 543  
 Star Lite 500 506  
 Starlight 475  
 Starlite 036 211  
 Stenway 446 529 540  
 Stern 386 387 538  
 Strato 500 506  
 Stylandia 493  
 Sunkai 379 391 412 529 542 544 552  
 558  
 Sunstar 500 506  
 Sunwood 379 408 500 506  
 Superla 373 492 493 498 527  
 Superscan 207  
 SuperTech 445 492 500 506 527 567  
 Supra 379 500  
 Supre-Macy 100  
 Supreme 002 199  
 Susumu 380 546  
 Sutron 379 500  
 Sydney 373 473 492 493 527 528  
 Sylvania 004 007 018 027 046 053  
 056 057 059 060 124 145 150 155  
 164 169 188 201 205 209 260 337  
 Symphonic 024 031 036 105 209 211  
 357  
 Sysline 475  
 Sytong 492 527

Tandberg 391 547 556  
 Tandy 099 207 371 373 374 380 387  
 457 473 493 512 514 528 529 536  
 Tashiko 373 386 392 402 473 492  
 493 505 507 520 527 528  
 Tatung 003 223 373 374 390 408 448  
 473 475 493 498 502 506 512 528  
 TCM 372 379 415 416 441 443 476  
 478  
 Teac 493 506 558 565  
 Tec 373 379 453 455 457 473 493  
 500 528 536 546 547 559  
 Technema 543  
 Technics 049 203 212 414  
 Techwood 004 049 155 203  
 TEDELEX 493  
 Teknika 001 002 004 005 007 011  
 012 015 036 044 060 073 096 097  
 155 205 206 211  
 Teleavia 400 404 441 451 461 545  
 Telecaption 159  
 Telecor 493 506 528 529 538  
 Telefunken 222 399 400 407 408 409  
 420 421 435 440 441 451 452 461  
 471 486 506 546 559 697 704  
 Telegazi 506 529 538  
 Telemeister 506 543  
 Telesonic 506

Televideo 492 527 543  
 Televiso 555  
 Temco 542  
 Tensai 379 380 385 391 408 493 500  
 506 516 528 529 536 542 543 554  
 Tenson 543  
 Tesmet 408  
 Tevion 372 379 415 416 441 443 476  
 478  
 Textet 373 473 492 493 500 528  
 Thomas 357  
 Thomson 373 400 404 405 407 408  
 409 410 435 436 441 451 452 461  
 471 481 506 545 546 559 582 583  
 607 707  
 Thorn 374 385 399 422 441 452 463  
 472 475 506 523 524 533 546 564  
 565  
 TMK 004 155 210  
 TNCi 200  
 Tokai 374 408 493 506 512 528 547  
 Tokyo 373 492 504 527  
 Tomashi 446 540  
 Toshiba 006 045 058 073 075 079  
 083 087 093 101 116 127 159 162  
 163 183 208 221 237 238 239 241  
 243 249 252 253 256 257 266 267  
 300 313 315 321 325 333 345 353  
 354 355 384 392 423 442 472 485  
 493 504 505 511 515 535 601 621  
 622 628 638 645 651 665 670 672  
 692  
 Totevision 097  
 Towada 387 455 493 515 549  
 Trakton 493  
 Trans Continens 493 506 528  
 Transtec 492  
 Trident 473 493 498 528  
 Tristar 529  
 Triumph 423 448 498 506 521 535  
 548 567  
 TVS 214  
  
 Uher 387 403 408 497 506 513 538  
 543 557  
 Ultravox 370 373 382 453 455 457  
 492 506 515 527 536  
 Unic Line 506 560  
 United 427 475  
 Universal 048 063  
 Universum 372 383 385 408 424 436  
 447 453 455 475 493 494 497 501  
 502 505 506 511 513 516 519 521  
 525 528 536 542 547 548 549 556  
 557 560 561 563 565 573  
 Univox 506 533 547

Vector Research 201

Vestel 386 387 408 424 453 455 460  
 475 476 493 506 528  
 Vexa 379 475 500 506  
 Victor 055 204 392 408 414  
 VIDEOLOGIC 492  
 Videologique 373 380 492 493 527  
 528 529  
 Videosat 453  
 VideoSystem 408 506  
 Videotechnic 492 493 527 528 543  
 Videoton 553  
 Vidikron 205  
 Vidtech 004 005 155 210  
 Viewsonic 038 149 218 297 299 316  
 Viking 100  
 Visiola 373 492 527  
 Vision 408 493 506 543  
 Vistar 457  
 Vizio 223  
 Vortec 408 475 506  
 Voxson 370 386 387 403 408 440  
 506 513 557  
  
 Waltham 373 457 460 473 493 506  
 528 553 557  
 Wards 000 001 004 005 018 031 044  
 048 053 056 057 059 060 063 064  
 154 155 169 189 201 205 210  
 Watson 408 475 506 529 543 566  
 568  
 Watt Radio 373 382 455 492 515 527  
 549  
 Waycon 208  
 Wega 370 392 505 506  
 Wegavox 500  
 Weltblick 408 475 493 506 543  
 Westinghouse 199 213 303  
 Weston 455  
 White Westinghouse 005 013 214  
 373 382 403 475 492 506 527 543  
 547  
 Windstar 540  
  
 Xrypton 506  
  
 Yamaha 004 005 018 155 201  
 Yamishi 493 506 528 529 540 558  
 Yokan 506  
 Yoko 372 373 379 380 408 473 475  
 492 493 497 500 506 528 529  
 Yorx 380 529  
  
 Zanussi 386 440 493 528  
 Zenith 001 020 081 089 118 125 155  
 200 206 210 214 254 278 314 323  
 329 352 357 363

#### DVD Brand Codes

Advent 163  
 Aiwa 026 131 134 309 348 466  
 Akai 146 162 300 340  
 Akura 388  
 Alba 409 412 413 431  
 Alco 160  
 Alpine 258  
 Amphion MediaWorks 167 171 264  
 AMW 167 171  
 Apex 001 056 057 095 098 145 273  
 360  
 Apex Digital 148 178 179 180 183  
 184 193 195 221 271 301  
 Aspire Digital 166  
 Audiovox 132 160 227 263 316  
  
 Best Buy 384  
 Blaupunkt 136 195  
 Blue Parade 191  
 BOSE 122 130  
 Boston 378  
 Brandt 370 408 423  
 Britannia 374  
 Broksonic 053 054 072 146 300  
 Bush 003 371 373 382 386 415 431  
 433 438 486  
  
 California Audio Labs 157  
 Cambridge Audio 376 393  
 CAT 379 380  
 Celestial 391  
 Centrex 389  
 Centrum 380  
 CGV 376  
 CineVision 385  
 Clarion 100  
 Classic 101 354  
 Clatronic 382  
 Coby 164 165 168  
 Conia 371  
 Crypto 387  
 C-Tech 377  
 CyberHome 083 405 417 419 429  
  
 Daewoo 058 062 137 138 325 326  
 327 418 456  
 Dalton 392  
 Dansai 375  
 Daytek 264 406  
 DEC 382  
 Denon 040 110 133 157 197 202 238  
 252 254 257 259 335 359 394 459  
 Denver 352 382 388  
 Denzel 372

Desay 381  
 Diamond 376 377  
 Digiton 390  
 Disney 194  
 DK Digital 003 443  
 Dmtech 323  
 Dual 372  
 DVD2000 188  
 DVX 377  
  
 Easy Home 384  
 Eclipse 376  
 Elta 336 353 427 433  
 Emerson 059 073 147 194 304 346  
 Enzer 372  
  
 Finlux 376  
 Fisher 112 134 349  
 Funai 194  
  
 Gateway 272  
 GE 041 079 118 189 195 255  
 Global Solutions 377  
 Global Sphere 377  
 Go Video 046 124 127 128 129 150  
 177 185 272 295 299 338  
 GoldStar 410  
 Goodmans 382 386 389 404 409 438  
 GFX 114  
 Gradiente 157  
 Graetz 372  
 Greenhill 195  
 Grundig 190 341 351 389 430 439  
  
 H&B 382 383  
 Haaz 376 377  
 Harman/Kardon 125 267 268 365  
 HiMAX 384  
 Hitachi 000 027 126 175 200 338 357  
 372 384 440 450 462 468  
 Hiteker 193  
 Humax 448  
  
 Initial 195  
 Innovation 342 343 344 357  
 Insignia 289  
 Integra 158 191  
 Irradio 017  
  
 JBL 043  
 Jensen 165  
 Jeutech 378  
 JVC 047 090 096 097 115 174 192  
 222 240 274 275 276 277 311 332  
 370 402 449 460 476 488 489 490  
 491 492 493 494 495  
  
 Kawasaki 160

KLH 160 195 221  
Koda 382  
Konka 029  
Koss 060 159 170 228  
KXD 384

Lasonic 081  
Lawson 377  
Lecson 375  
Lenco 382  
Lenoxx 169  
LG 059 270 346 407 410 414 451  
477 483  
Life 342 343 344  
Lifetec 342 343 344 357  
Limit 377  
Liquid Video 170  
Lite-On 272  
Loewe 341 437 471  
LogicLab 377  
Luxor 389

Magnavox 002 018 045 051 147 176  
187 190 194 370 382 395  
Magnum 357  
Marantz 034 190 250 350 458 472  
Matsui 423  
MBO 366  
Mediencom 374  
Medion 324 342 343 344 357 386  
Memorex 003 146  
Metz 339  
MiCO 376  
Micromaxx 342 343 344 357  
Micromedia 370  
Micromega 401  
Microsoft 189  
Microstar 342 343 344 357  
Mintek 004 195  
Mirror 386  
Mitsubishi 021 030 123 142 186 188  
337 396  
Mizuda 382 384  
Monyka 372  
Mustek 354 404 470  
Mx Onda 376

NAD 059 139 364  
Naiko 389  
Nakamichi 116 368  
Nesa 195  
Neufunk 372  
Nexxtech 140  
Norcent 005 117 164 168 262  
NU-TEC 371

Omni 374  
Onkyo 006 024 158 187 235 345 370

395  
Optim 375  
Optimus 398  
Orava 382  
Orion 054  
Oritron 009 159 170 344

P&B 382  
Pacific 377  
Palsonic 373  
Panasonic 066 075 076 153 154 155  
156 157 187 197 202 203 219 225  
226 245 246 248 259 279 281 284  
303 306 307 308 310 317 318 319  
321 335 394 467 474 478 487  
Philips 002 017 018 032 036 045 073  
088 091 109 176 187 190 194 206  
208 234 237 241 280 283 285 296  
313 333 341 350 370 395 401 416  
421 422 425 428 436 441 446 447  
458 473  
Pioneer 008 016 143 172 191 201  
224 236 243 251 282 290 339 398  
479  
Polaroid 007 184 221 264  
Polk Audio 190  
Presidian 194  
Proceed 193  
Proline 389  
Proscan 010 033 118 189 233  
Provision 382

Qwestar 009 159 265

Raite 372  
RCA 010 042 048 055 063 077 099  
107 118 149 152 160 189 191 195  
198 210 253 291 294 302 312 355  
REC 373 374  
RedStar 388  
Regent 169  
Reoc 377  
Revoy 383  
Roadstar 373 382 455  
Rotel 192  
Rowa 161 371 389  
Rownsonic 380

Saba 408 423  
Sabaki 377  
Sampo 119 356  
Samsung 012 046 049 074 085 102  
150 157 162 175 177 181 185 200  
204 218 223 298 314 320 338 403  
452 464 480 482  
Sansui 054 071 146 300 376 377  
Sanyo 050 120 134 144 146 426 461  
ScanMagic 404

Schneider 322 323 324 344  
Scientific Labs 377  
Scott 392 412  
SEG 322 362 372 377 409 420 444  
Sensory Science 272  
Sharp 013 015 044 086 194 207 215  
287 297 342 364 463 469  
Sherwood 121 361  
Shinco 355  
Shinsonic 173  
Sigmatek 384  
Silva 388  
Singer 376 377  
Skymaster 353 354 377 420  
Skyworth 388  
SM Electronic 377  
Sony 014 020 022 065 068 069 070  
087 103 108 113 173 182 196 199  
205 211 213 214 217 229 231 239  
278 292 334 399 411 424 432 434  
442 445 466 475 481  
Soundmaster 377  
Soundmax 377  
Standard 377  
Star Cluster 377  
Starmedia 382  
Sungale 269  
Superscan 147  
Supervision 377  
Sylvania 002 064 073 078 092 147  
194 304  
Symphonic 002 194  
Synn 377

TCM 342 343 344 357  
Teac 160 266 339 371 377 465  
Tec 388  
Technics 157 202 394  
Techwood 141  
Telefunken 380  
Tevion 342 343 344 357 377 392  
Theta Digital 191  
Thomson 328 329 330 331 369 397  
408 457 484  
Tokai 372 388  
Toshiba 023 025 037 038 054 080  
084 088 093 094 135 146 151 187  
209 212 216 220 230 232 244 247  
249 293 288 293 300 305 333 370  
395 453 454 485  
TruVision 384

Urban Concepts 187

Venturer 011 160  
Vtrek 387

Wharfedale 347 376 377

Wintel 378

Xbox 189 397  
Xlogic 377  
XMS 373

Yakumo 389  
Yamaha 028 157 190 197 242 286  
335 358 389 394 422 435  
Yamakawa 367 372  
Yukai 404

Zenith 052 059 128 187 270 346 370  
395

## STB Compatibility

At short range all the Amino remote controls will work with all Amino Set-Top-Boxes. At longer range it may be necessary to ensure the correct STB brand code has been selected. This only applies to remote part numbers beginning with 510. Remote part numbers beginning 002 or 502 will only work with A103/A110(H)/A120/A124/A500 boxes at longer distances. If you have been given an incompatible remote control please consult your service provider.

Once you have identified the correct brand code in the table above:

- Simultaneously press and hold the STB and OK buttons on the remote – after approximately 2 seconds, the STB button will light.
- Release the STB and OK buttons – the STB button remains illuminated.
- Now enter the 3-digit brand code – as each of the digits are entered, the STB button will briefly flash off and on again.
- When the third digit has been entered, the STB button will go out.
- If an STB brand code has been entered that the remote does not recognize, the STB button will flash rapidly for a second and remain illuminated. If this happens, re-enter the correct STB brand code.
- Verify that the remote control works with the STB.
- If no brand code is entered, or it is incomplete, after several seconds, the remote will exit the STB brand code entry mode and the STB brand code will be unchanged.



POWERED BY *Camellia*  
COMMUNICATIONS





Greenville 371-3000  
Georgiana 756-7000  
McKenzie 656-5000  
Fort Deposit 404-4000